

800W切割灯通道表1

通道1	通道2	通道3	通道4	名称	数值	描述
[CH1]	[CH1]	[CH1]	[CH1]	X轴	0-255	0-540度
[CH2]	[CH2]	[CH2]	[CH2]	X轴微调	0-255	0-2度
[CH3]	[CH3]	[CH3]	[CH3]	Y轴	0-255	0-270度
[CH4]	[CH4]	[CH4]	[CH4]	Y轴微调	0-255	0-1度
[CH5]	[CH5]	[CH5]	[CH5]	XY速度	0-255	由快到慢
[CH6]	[CH6]	[CH6]	[CH6]	复位/功能	0-139	无功能
					140-149	6秒后复位XY电机
					150-199	6秒后复位效果电机
					200-209	6秒后复位整灯
					210-255	无功能
[CH7]	[CH7]	[CH7]	[CH7]	空	0-255	
[CH8]	[CH8]	[CH8]	[CH8]	空	0-255	
[CH9]	[CH9]	[CH9]	[CH9]	空	0-255	
[CH10]	[CH10]	[CH10]	[CH10]	色盘	0-127	线性颜色
					128-129	白光
					130-141	颜色1
					142-153	颜色2
					154-165	颜色3
					166-177	颜色4
					178-189	颜色5
					190-215	由快到慢反向流水
					216-217	停止
				218-255	由慢到快正向流水	
[CH11]		[CH11]		色盘微调	0-255	
[CH12]	[CH11]	[CH12]	[CH11]	色盘2	0-127	线性颜色
					128-129	白光
					130-141	颜色1
					142-153	颜色2
					154-165	颜色3
					166-177	颜色4
					178-189	颜色5
					190-215	由快到慢反向流水
					216-217	停止
				218-255	由慢到快正向流水	
[CH13]		[CH13]		色盘2微调	0-255	
[CH14]	[CH12]	[CH14]	[CH12]	青色	0-255	
[CH15]	[CH13]	[CH15]	[CH13]	品红	0-255	
[CH16]	[CH14]	[CH16]	[CH14]	黄色	0-255	
[CH17]	[CH15]	[CH17]	[CH15]	色温	0-255	
		[CH18]	[CH16]	绿色校正	0-255	
[CH18]	[CH16]	[CH19]	[CH17]	预留	0-255	
[CH19]	[CH17]	[CH20]	[CH18]	流水速度	0-255	
[CH20]	[CH18]	[CH21]	[CH19]	CMY速度	0-255	
[CH21]	[CH19]	[CH22]	[CH20]	图盘速度	0-255	由快到慢
[CH22]	[CH20]	[CH23]	[CH21]	效果切入	0-127	效果切入
					128-255	与白光任意切换
[CH23]	[CH21]	[CH24]	[CH22]	图盘效果	0	
					1-127	由快到慢反向流水
					128	停止
					129-255	由慢到快正向流水

[ CH24 ]	[ CH22 ]	[ CH25 ]	[ CH23 ]	空	0-255	
					0-8	白光
					9-17	图案1
					18-26	图案2
					27-35	图案3
					36-44	图案4
					45-53	图案5
					54-62	图案6
					63-71	图案7
					72-80	图案8
					81-91	图案9
[ CH25 ]	[ CH23 ]	[ CH26 ]	[ CH24 ]	图盘	92-103	由慢到快抖动图案1
					104-115	由慢到快抖动图案2
					116-127	由慢到快抖动图案3
					128-139	由慢到快抖动图案4
					140-151	由慢到快抖动图案5
					152-163	由慢到快抖动图案6
					164-175	由慢到快抖动图案7
					176-187	由慢到快抖动图案8
					188-199	由慢到快抖动图案9
					200-201	白光
					202-222	由快到慢反向流水
					223-255	由慢到快正向流水
					0-3	白光
					4-7	图案1
					8-11	图案2
					12-15	图案3
					16-19	图案4
					20-23	图案5
					24-27	图案6
					28-31	图案7
					32-35	图案1
					36-39	图案2
					40-43	图案3
					44-47	图案4
					48-51	图案5
					52-55	图案6
					56-59	图案7
[ CH26 ]	[ CH24 ]	[ CH27 ]	[ CH25 ]	旋转图盘	60-69	由慢到快抖动图案1
					70-79	由慢到快抖动图案2
					80-89	由慢到快抖动图案3
					90-99	由慢到快抖动图案4
					100-109	由慢到快抖动图案5
					110-119	由慢到快抖动图案6
					120-129	由慢到快抖动图案7
					130-139	由慢到快抖动图案1
					140-149	由慢到快抖动图案2
					150-159	由慢到快抖动图案3
					160-169	由慢到快抖动图案4
					170-179	由慢到快抖动图案5
					180-189	由慢到快抖动图案6
					190-199	由慢到快抖动图案7
					200-221	由快到慢反向流水
					222-223	停止
					224-255	由慢到快正向流水
					0-255	0-360度

[ CH27 ]	[ CH25 ]	[ CH28 ]	[ CH26 ]	图盘自转	1-127	由快到慢正向流水
					128	停止
					129-255	由慢到快反向流水
[ CH28 ]		[ CH29 ]		图盘微调	0-255	
[ CH29 ]	[ CH26 ]	[ CH30 ]	[ CH27 ]	棱镜1	0-19	无
					20-255	插入棱镜1
[ CH30 ]	[ CH27 ]	[ CH31 ]	[ CH28 ]	棱镜自转	0-127	0-360度
					128-190	由快到慢正向流水
					191-192	停止
					193-255	由慢到快反向流水
[ CH31 ]	[ CH28 ]	[ CH32 ]	[ CH29 ]	雾化	0-139	雾化
					140-255	雾化与白光任意切换
[ CH32 ]	[ CH29 ]	[ CH33 ]	[ CH30 ]	光圈	0-255	
[ CH33 ]		[ CH34 ]		光圈微调	0-255	
[ CH34 ]	[ CH30 ]	[ CH35 ]	[ CH31 ]	放大	0-255	由大到小
[ CH35 ]		[ CH36 ]		放大微调	0-255	
[ CH36 ]	[ CH31 ]	[ CH37 ]	[ CH32 ]	调焦	0-255	由远到近
[ CH37 ]		[ CH38 ]		调焦微调	0-255	
[ CH38 ]	[ CH32 ]	[ CH39 ]	[ CH33 ]	切片旋转	0-255	
[ CH39 ]	[ CH33 ]	[ CH40 ]	[ CH34 ]	切片1	0-255	
[ CH40 ]	[ CH34 ]	[ CH41 ]	[ CH35 ]	切片2	0-127	
					128	开光
					129-255	
[ CH41 ]	[ CH35 ]	[ CH42 ]	[ CH36 ]	切片3	0-255	
[ CH42 ]	[ CH36 ]	[ CH43 ]	[ CH37 ]	切片4	0-127	
					128	开光
					129-255	
[ CH43 ]	[ CH37 ]	[ CH44 ]	[ CH38 ]	切片5	0-255	
[ CH44 ]	[ CH38 ]	[ CH45 ]	[ CH39 ]	切片6	0-127	
					128	开光
					129-255	
[ CH45 ]	[ CH39 ]	[ CH46 ]	[ CH40 ]	切片7	0-255	
[ CH46 ]	[ CH40 ]	[ CH47 ]	[ CH41 ]	切片8	0-127	
					128	开光
					129-255	
[ CH47 ]	[ CH41 ]	[ CH48 ]	[ CH42 ]	频闪	0-31	关光
					32-63	开光
					64-95	由慢到快脉冲频闪
					96-127	开光
					128-159	由慢到快渐变频闪
					160-191	开光
					192-223	由慢到快随机频闪
					224-255	开光
[ CH48 ]	[ CH42 ]	[ CH49 ]	[ CH43 ]	调光	0-255	0-100%调光
[ CH49 ]		[ CH50 ]		调光微调	0-255	